

# Interchange Table

PIBS P/N	ALINABAL	AURORA	HEIM/BOSTON	MORSE/SPHERCO	NATIONAL	NMB/NHBB
<b>MALE ROD ENDS</b>						
CM	AM	CM	M-CR	CFM	MSM	
M		BM	HM	TRE		
M-SB	VM		HM-C	TM	MBM	
JM	CM	MM/KM	HMA		MTSM	HAMR
JM-T		MM-T/KM-T	HME	TRE-T	MTSM-T	AMRT
JMX		AM	BHM	ARE	TSMX	HAMRX
JMX-T		AM-T				
RJMX-T		RAM-T				
EMX-Z			HMX-G	ARE-20N	BMX-Z	
RSM		XM			RM	AXM
RSM-T		XM-T			RM-T	
RSMX		XAM			RMX	XAMX
RRSMX-T		XAM-T			RMX-T	
ALJM		RXAM-T				
ALJM-T		ALM			KCA	
ALRSM		ALM-T				
ALRSM-T		XALM			KCAX	
SCM-T		CM-ET			SSM-T	
<b>FEMALE ROD ENDS</b>						
CF	AF	CW	F-CR	CFF	MSF	AHF-LSPL
F		BW	HF	TR		
F-SB	VF		HF-C	TF	MBF	
JF	CF	MW/KW	HFA		MTSF	HAFR
JF-T		MW/KW-T	HFE	TR-T	MTSF-T	AFRT
JFX		AW			TSFX	HAFRX
JFX-T		AW-T			TSFX-T	
EFX-Z			HFX-G	AR-N	BFX-Z	
SCF-T		CW-ET			SFF-T	
<b>SPHERICAL BEARINGS</b>						
COM	CBAC	COM	COM	COM	COM	CBG
COMH		HCOM		BH-LS		
COMP				SBG-LS		
FKB			LHB	SBG		
FKS			LHA	SBG-S		
FKSS			LHSS	SBG-SS		
FKSSX				COR		
FKSSXT		NC-T/PNB-T	NE/LHSSE	NRR/SB-SST	NSSB/NSBT	ABT/ABT-S
WSSXT		WC-T/PWB-T	WE	WRR	WSSB/WGBT	ABWT/ABWT-S
K	CBC		LS	FLBG	BSB	ASL-G