 


# BSQ

Big Success Quality

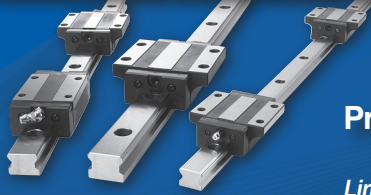

## Product Line-Up

*Linear Guide*

*Miniature Guide*

*Cross Roller Slide Guide*

*Cross Roller Slide Table*

*Goniometer Cross Roller Guide*

*Cross Roller Rotary Guide*

 
*Ball Slide*

*Support Unit*

*Manual Stage*

*Micrometer Head*

[www.bsq-fa.com](http://www.bsq-fa.com)

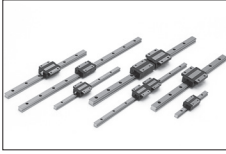

## Linear Guide

<b>Linear Guide</b> .....	<b>A-2</b>
MCS-N / MCS-SN .....	A-4
MCS-F / MCS-SF .....	A-6
MCH-N / MCH-LN .....	A-8
MCH-F / MCH-LF .....	A-10



 
## Miniature Guide

<b>Miniature Linear Guide</b> .....	<b>B-2</b>
<b>MCM-MCM-L</b> .....	<b>B-8</b>
MCM5 / MCM7 / MCM9 / MCM12 / MCM15 .....	B-10
<b>MCMW-MCMW-L</b> .....	<b>B-20</b>
MCMW5 / MCMW7 / MCMW9 / MCMW12 / MCMW15 .....	B-22



## Cross Roller Slide Guide

<b>Cross Roller Slide Guide</b> .....	<b>C-2</b>
JV1 / JV2 / JV3 / JV4 / JV6 / JV9 / JVN6 / JVN9 .....	C-8
JWW1 / JWW2 / JWW3 / JWW4 .....	C-24
JC1 / JC2 / JC3 / JC4 / JC6 / JC9 .....	C-32

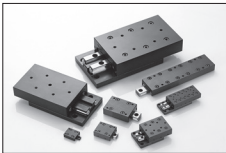

## Cross Roller Slide Table

<b>Cross Roller Slide Table Guide</b> .....	<b>D-2</b>
JVT1 / JVT2 / JVT3 .....	D-8
JVT1-A / JVT2-A / JVT3-A .....	D-14
JVU1 / JVU2 / JVU3 / JVU4 / JVU6 / JVU9 .....	D-20



## Goniometer Cross Roller Guide

<b>Goniometer Cross Roller Guide</b> .....	<b>E-2</b>
JRV2040 / JRV2060 / JRV3050 / JRV3060 / JRV3070 .....	E-7



## Cross Roller Rotary Guide

<b>Cross Roller Rotary Guide</b> .....	<b>F-2</b>
JRA / JRB / JRU / JRE .....	F-14



 
## Ball Slide

JBSP / MCM7P .....	G-2
--------------------	-----




## Support Unit

BK6 / BF6 / EK6 / EF6 .....	H-3
FK6 / FF6 .....	H-4
BK8 / BF8 / FK8 / FF8 .....	H-5
BK10 / BF10 / FK10 / FF10 .....	H-6
EK10 / EF10 / AK10 / AF10 .....	H-7
BK12 / BF12 / FK12 / FF12 .....	H-8
EK12 / EF12 / AK12 / AF12 .....	H-9
BK15 / BF15 / FK15 / FF15 .....	H-10
EK15 / EF15 / AK15 / AF15 .....	H-11
BK17 / BF17 / FK17 / FF17 .....	H-12
BK20 / BF20 / FK20 / FF20 .....	H-13
EK20 / EF20 / AK20 / AF20 .....	H-14
BK25 / BF25 / EK25 / EF25 .....	H-15
FK25 / FF25 / FK25T / FF25T .....	H-16
BK30 / BF30 / FK30T / FF30T .....	H-17
FK30 / FF30 .....	H-18
BK35 / BF35 / FK35 / FF35 .....	H-19
BK40 / BF40 / FK40 / FF40 .....	H-20

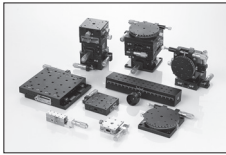

## Manual Stage

 JCX-25 / JCY-25 / JCZ-25 / JCXYZ-25 .....	I-2
JX-25 / JXY-25 / JZ-25 / JXYZ-25 .....	I-4
JCX-30 / JCY-30 / JCZ-30 / JCXYZ-30 .....	I-6
JCX-40(18H) / JCY-40 / JCXY-40 / JCXY-40-S .....	I-8
JCZ-40 / JCXYZ-40 / JX-40 / JXY-40 .....	I-10
JXY-40-S / JZ-40 / JXYZ-40 / JX-5015 / JX-6025 .....	I-12
JCX-60(18H) / JCY-60 / JCX-60(24H) / JCXY-60 .....	I-14
JCXY-60-S / JCZ-60 / JCXYZ-60 / JX-60 .....	I-16
JXY-60 / JXY-60-S / JZ-60 / JXYZ-60 .....	I-18
JCX-80-13 / JCX-80-25 / JCXY-80-13 / JCXY-80-25 .....	I-20
JCZ-80-13 / JCZ-80-25 / JCXYZ-80-13 / JCXYZ-80-25 .....	I-22
JCX-90(24H) / JCXY-90(24H) / JCX-100-25 / JCX-100-50 .....	I-24
JCXY-100-25 / JCXY-100-50 / JCX-120-25 / JCX-120-50 .....	I-26
JCXY-120-25 / JCXY-120-50 .....	I-28

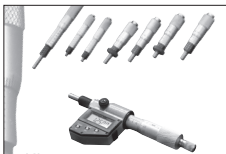

## Micrometer Head

JALB71 / JALB72 .....	J-2
JALB73 / JALB74 .....	J-4
JALB73-DIG .....	J-5